

SPEAKMAN COMPANY

SE-599 Installation, Maintenance & Operation Instructions

DESCRIPTION

Portable emergency body wash that provides spot drenching in remote locations. Utilizes a stainless steel tank shell and chrome-plated valve. Valve allows for easy recharge in the field.

SPECIFICATIONS

TANK: 2 ½ Gallon (9.5 Liters) Stainless Steel.
SPRAY HEADS: (1) Chrome plated brass Speakman Soft Flow with plastic dust cover.
VALVE: Self closing chrome-plated brass.
ACTIVATOR: Stainless Steel Handle.
DRENCH HOSE: 16" Reinforced, 250 PSI Max Pressure.
SHIPPING WEIGHT: 7 ½ lbs.
FILLED WEIGHT: 28 ½ lbs.

INSTALLATION

NOTE: FILL TANK WITH POTABLE WATER ONLY.

With the tank depressurized, remove the valve assembly. Ensure that the fill tube is fully seated within the tube groove. Once filling has begun, it may be necessary to hold the fill tube inside the groove for a proper seal. Fill the tank until water has risen to the top of the fill tube. It is okay if the water level drops once the fill tube is released. Insert the valve back into the tank and properly tighten. The hose should be located to left of the label and parallel with the wall-mounting bracket. Secure the hose with the hose holder.

Remove the cap from the pressurization port. Pressurize to 100 psi. This is indicated on the valve gauge and depicted within the green charge zone. Replace the cap to the port.

Choose the location of your body wash carefully. It should be placed near hazards and clearly visible from the hazard area. When mounted, the hanging device must withstand a vertical force of five times the weight of the charged body wash. The height should allow easy removal of the unit. It is recommended that the supplied hanger bracket be attached to the wall so that the top of the body wash is within 3 ½ to 5 feet above the floor.

On walls where 2 x 4 studs can be located, use No. 14 wood screw, 1 ¼ in. long. On plasterboard wall, mount hanger on ¾ in. x 10 in. x 24 in. board and attach board to wall using 3/16 in. toggle bolt. On Cement or Cinder block walls, use 3/16 in. toggle bolt or ¼ in. lead screw anchor. On concrete walls, use ¼ in. lead insert or ¼ in. lead screw anchor. In tile, use ¼ in. lead screw anchor and locate in tile joint.

OPERATION

The body wash is activated by pulling the safety pin from the activation handle and squeezing handle fully. Pulling the safety pin will break the safety seal. Once the unit is activated, water will discharge from the spray outlet until the handle is released or until the unit has fully expelled. Activation causes the self-closing valve to open and water to flow from the outlet.

MAINTENANCE

Inspect pressure gauge every week to assure fully charged 100 psi working pressure. Clean and replace water every two weeks using only clean fresh potable water. Should you need parts to repair this unit, please reference the parts listing below for correct part numbers.

WARNING: Use only genuine Speakman parts when repairing or replacing components. To order parts call 1-800-537-2107.

Replace the water and clean the tank at least once a month. To clean the tank, drain the water through the hand held drench hose or the eyewash. Refill as instructed in the operation section.


SE-599 REPLACEMENT/REPAIR PARTS

<u>ITEM</u>	<u>PART/GROUP #</u>	<u>DESCRIPTION</u>
1	RPG05-0821	Tag and Seal Group
2	RPG05-0647	Dust Cap Assembly

FLOW DATA

HAND-HELD SPRAY

FLOW RATE	GPM (LPM)	0.9 (3.4) For 2 minutes.
-----------	-----------	--------------------------

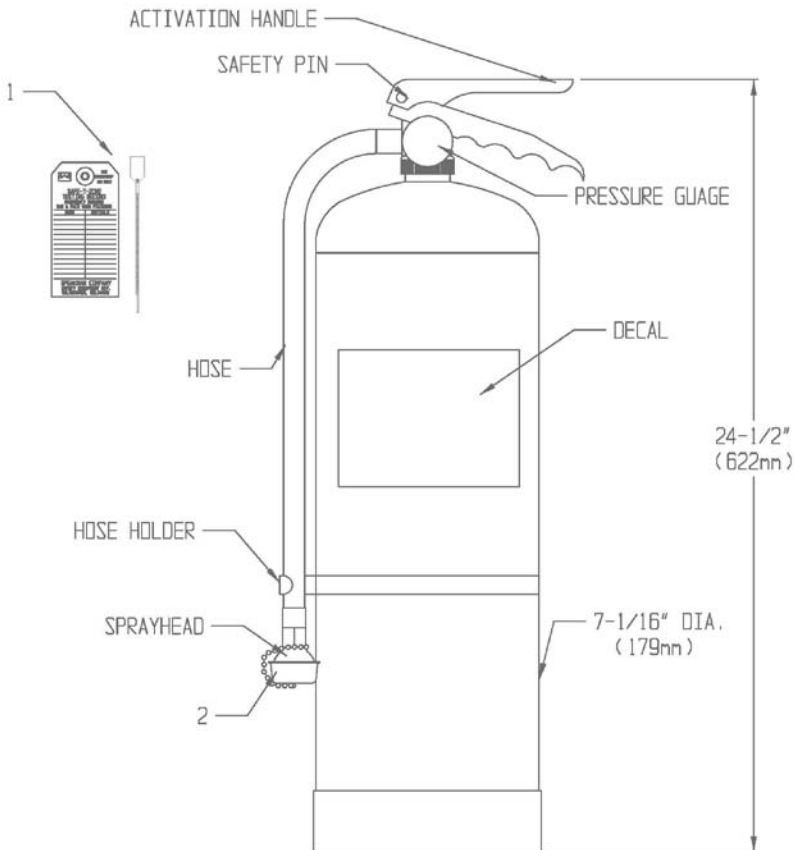

SPEAKMAN®

PO Box 191 Wilmington, DE 19899 Phone: 800-537-2107 Fax: 800-977-2747
 Visit us on the web at www.speakmancompany.com