

SPEAKMAN COMPANY
S-3242 Installation, Maintenance & Operation Instructions
COMMANDER® HEALTHCARE BEDPAN WASHER

DESCRIPTION

Speakman concealed chrome plated COMMANDER bedpan washer with PERFECT® valves. ¼ turn ceramic cartridges covered by a 25 year Silver warranty. Vandal-resistant four arm handles with color-coded indexes. Brass supply ell with wall flange. Brass inline vacuum breaker. 69" white vinyl reinforced hose. Insulated handle. Spray outlet and wall hook. Reversible couplings for ½" sweat or NPTF inlet.

SPECIFICATIONS

SUPPLY: 1/2" NPT FEMALE OR 1/2" SWEAT
 SHIPPING WEIGHT: XXX LBS.

OPTIONS


EVB Elevated Vacuum Breaker

SCV Self Closing Valve on Handle with Elevated Vacuum Breaker - Includes Spring Check Stops and Teardrop Escutcheons

INSTALLATION

Install the hot and cold supply lines for the valve. Slip the coupling nuts onto the supply lines. MALE THREADED SUPPLIES: Apply pipe sealant to threads of supplies. Screw swivels on and tighten with pipe wrench making sure not to damage seating area. COPPER TUBE SUPPLIES: Sweat (solder) swivels onto ends of supplies. Insert fitting through wall while positioning onto supply lines. Screw coupling nuts onto fitting and tighten with wrench. Anchor fitting securely to wall studs or other structural member. Install piping for supply ell to fitting. Complete finished wall. Install supply ell and flange to piping. Install vacuum breaker and hose assembly to supply ell. Mount wall hook for spray assembly to wall. Remove the cardboard sleeve protectors from fitting. Turn water supplies on and check all connections for leaks. Slip spindle sleeves on to spindles. Screw trim onto fitting and tighten. Position handles and screws onto spindles. Position index buttons on handles and press into place.

ROUGH-IN MEASUREMENTS

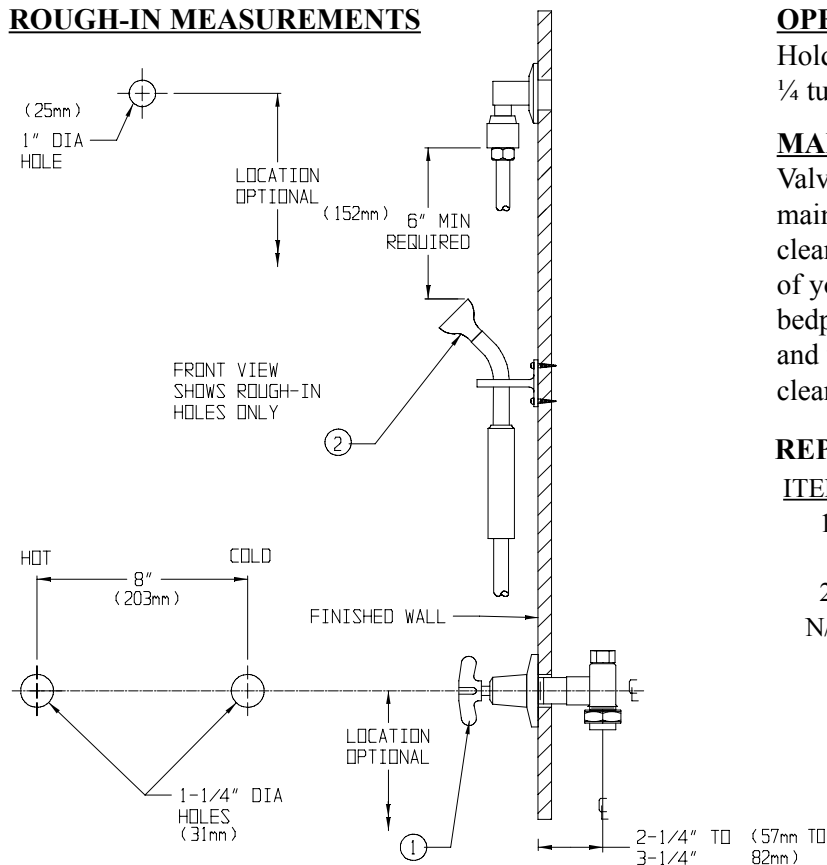

OPERATION

Holding spray assembly simply rotate the handles ¼ turn maximum to operate the bedpan washer.

MAINTENANCE (CARE AND CLEANING)

Valves are washerless and require no routine maintenance. Periodically remove spray face and clean out any clogged holes. The gleaming finish of your SPEAKMAN Commander® HEALTHCARE bedpan washer can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

REPAIR / REPLACEMENT PARTS

ITEM #	PART/GROUP #	DESCRIPTION
1	RPG04-0323-PC	4 ARM HANDLES (2) W/ SCREWS & INDEXES
2	G63-0055	SPRAY HOSE ASSEMBLY
N/S	RPG05-0605	PERFECT VALVE GROUP W/ TRIM SLEEVE & HANDLE SCREW

NOTES:

1. INLETS & OUTLETS ARE 1/2" NPT FEMALE UNLESS OTHERWISE SPECIFIED.
2. LOCATION OF WALL HOOK IS OPTIONAL BUT RESTRICTED BY 69" HOSE LENGTH RUNNING FROM SUPPLY ELL TO INSULATED HANDLE.